
Kent Precision Window Cutter

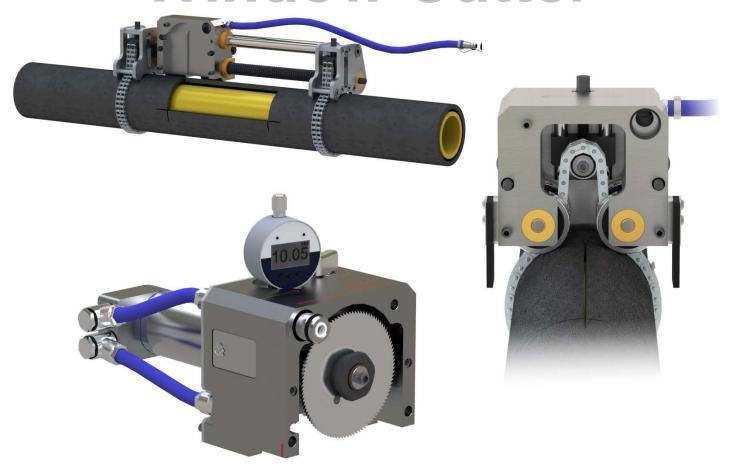

Parts Catalog



Safety Warnings

- Always use the Kent Precision Window Cutter in a tidy environment; this will reduce the risks of accidents.
- Make sure the environment that you are working in is safe. You will not be able to monitor potential hazards while concentrating on using the Kent Precision Window Cutter.
- This equipment generates hazardous levels of noise, when in operation wear ear protectors.
- Keep any unnecessary persons from the area while using the Kent Precision Window Cutter.
- When not in use return the Kent Precision Window Cutter to its packaging and store in a secure place.
- If in doubt about the suitability of this product for a situation contact PLCS Inc. for further information.
- Always wear appropriate Personal Protective Equipment (PPE) and apparel, consult the manual or experienced health and safety adviser for further information.
- In situations where material from the cut may become airborne, consult your health and safety adviser in regards to potential health hazards.
- Do not abuse the Kent Precision Window Cutter, misuse can lead to accidents.
- Do not use on a pipe not within the Kent Precision Window Cutters specification. Using this tool outside of its design limits may not provide the results expected or maybe dangerous. Consult our technical department for further information.
- Always disconnect the Kent Precision Window Cutter and its accessories from the compressed air supply when not in use to prevent accidental operation.
- Always remove all detachable accessories and tools from the Kent Precision Window Cutter when not in use.
- Always check for damage to the Kent Precision Window Cutter and its accessories. If any damage is found return the item for repair, the use of non-standard items or accessories may present a risk of personal injury.
- Before and after every use check pressurised pipes for signs of damage or deterioration. Replace any faulty items before use.
- Ensure the compressed air supply is compatible with the tooling requirement.
- Compressed air can cause injury to the body. Examples include entry into orifices, penetration of the skin and air contaminated with swarf being blow onto eyes or skin.
- Never operate the cutter with a cracked, damaged or worn blade.
- Do not remove swarf with your bare hands.
- Disconnect all included tools from the air supply before changing accessories, servicing or performing any maintenance. De-pressurise the tool before removing the air hose.
- Maintain the Kent Precision Window Cutter and its accessories in good condition. Contact PLCS Inc. for genuine replacement parts.
- Replace or repair damaged parts. Use genuine parts only. Non-genuine parts may be dangerous and will invalidate the warranty.
- Only use the tools for their expressed purposes.
- Use a face or dust mask if dust is generated. Wear appropriate protective clothing.
- Remove ill-fitting clothes, ties, watches, rings and other loose jewelry. Contain or tie back long hair.
- Keep children and unauthorised persons away from the working area.
- WARNING! air pressure should not exceed 7 bar.
- Keep air hoses away from heat, oil and sharp edges. Check air hose for wear before each use, and ensure that all connections are secure.
- DO NOT operate any of the tools or accessories if any parts are damaged or missing as may cause failure or personal injury.
- DO NOT carry the window cutter by the hose, or yank the hose from the air supply.
- DO NOT allow untrained persons to operate these tools.
- DO NOT operate these tools when you are tired, under influence of alcohol, drugs or intoxicating medication.
- DO NOT defeat safety valves or features.
- DO NOT direct air from the blow gun at yourself, others or animals.
- DO NOT operate this tool unless attached to the pipe and all preparations have been carried out to a satisfactory manner
- When not in use disconnect from the air supply and store in a safe, dry, childproof area.





Wear gloves

when using



Maintenance


Maintenance of the Kent Cutter is very important. It should be stored in a dry place and be free from dirt and other materials.

- A blowgun is included with the kit to aid maintenance. It should be used after every operation to remove any swarf or debris from inside the cutter. Small pieces of abrasive swarf within the machine will reduce its performance and shorten the life of any moving components.
- It should be cleaned down after every use. The guide rails for the Longitudinal cut need to be cleaned and lubricated with a light aerosol spray.
- Checking of the blade before and after every cutting operation is crucial. Using a worn or damaged blade will lower the cutting performance. Before every cut, the blade should be inspected for signs of warping, missing teeth and dulling of the teeth edges.
- Check the filter lubricator and air system ensure that the lubricator is full and dispensing the correct amount of oil, follow all steps outlined in the Kent Precision Window Cutter Operator Instructions section 5.1.



Components

Cutter Module Components

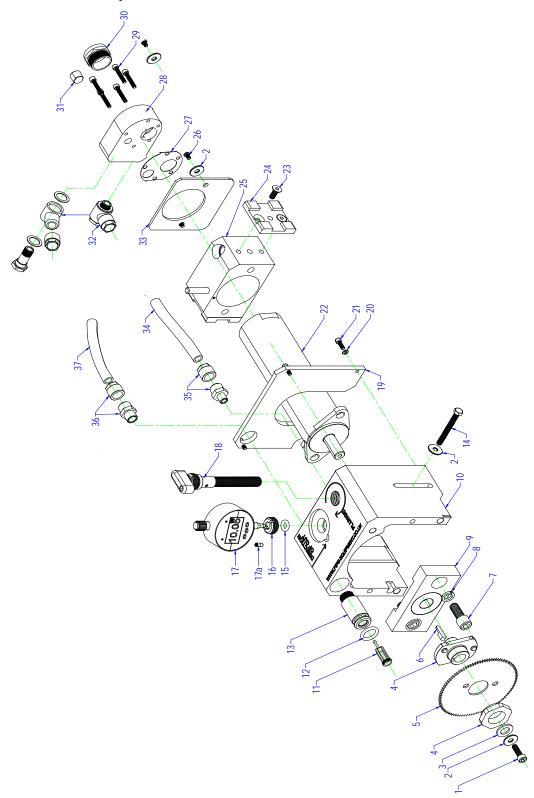




Item	Part No.	Part Name	Oty
27	941145	Air Motor Manifold Gasket	1
28	941140	Air Motor Manifold	-
29	15904025SS	Cap Head Bolt M4 x 25mm SS	5
30	046019	Silencer - ¾" BSP	_
31	149003	Plug - 1/, BSP	_
32	114601	Hose Fitting – Banjo x 10mm OD PU Hose	2
33	941135	Guard Rubber Motor Block	_
34	941170	Cutter Module Lower Hose	_
35	114602	Hose Fitting – 1/8" BSP x 10mm OD PU Hose	_
36	114603	Hose Fitting – 1/4" BSP x 10mm OD PU Hose	-
37	941175	Cutter Module Upper Hose	-

ltem	Part No.	Part Name	Oty
_	15906020SS	Cap Head Bolt M 6 x 20mm SS	-
2	20900618SS	Washer M6 x 18mm SS	4
3	900690	14" Rubber Backed Washer	_
4	941115	Blade Retaining Nut	_
2	944150	Kent Cutter Blade, Standard Kent Cutter Blade, Steel	-
9	941105	Blade Mount Assembly	-
7	15910025SS	Cap Head Bolt M10 x 25mm SS	2
8	209010SP	Spring Washers M10	2
6	941120	Motor Shaft Bearing Support Incl Bearing	_
10	941005	Cutter Housing	_
1	941155	Filter	_
12	399208	O-Ring	_
13	941150	Air Transfer Fitting	_
14	15906035SS	Cap Head Bolt M6 x 35mm SS	_
15	399203	O-Ring	1
16	941165	Depth Gauge Retention insert	_
17	944140	Digital Depth Indicator (DDI)	_
17a	944145	DDI Extension	Opt
18	941015	Blade Plunge Assembly	-
19	941160	Back Plate	_
20	209004SP	Spring Washer M4	4
21	15904010SS	Cap Head Bolt M4 x 10mm	4
22	941075	Air Motor	-
23	16706016SS	Bolt C'Sunk M6 x 16mm SS	4
24	941055	Bearing Plate - Plunge Block	2
25	941045	Plunge Block Assembly	1
26	16606010SS	Pan Head Screw M6 x 10mm	2



Circumferential Module

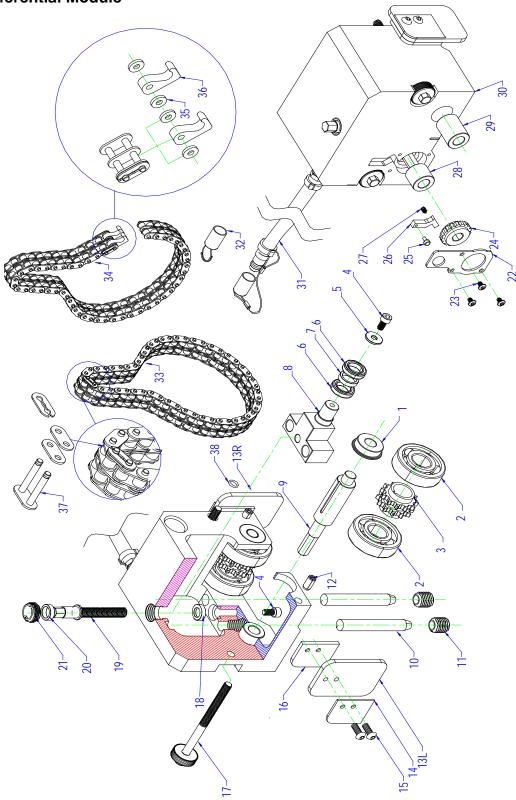




27 943110 Spring 1 28 943085 Bush – Axle Short – Brass 1 29 943090 Bush – Axle Long – Brass 1 30 943010 Circumferential Housing 1 31 944005 Air Inlet Hose – 1m 1 32 944015 Rubber Cap – With Key ring 1 33 Chain, Continuous, C/W Split Link Opt 944205 Chain, 8" Circumferential - Extension Opt 944206 Chain, 12" Circumferential - Extension Opt 944200 Chain, 18" Circumferential - Extension Opt 94420 Chain, 18" Circumferential - Extension Opt 944250 Chain, 18" Circumferential - Extension Opt 36 944256 Chain Hook 2 37 944256 Chain Hook 2 37 944250 Split Link 1 38 39900502 O-Ring 2	Item	Part No.	Part Name	Oty
943085 Bush – Axle Short – Brass 943090 Bush – Axle Long – Brass 943010 Circumferential Housing 944005 Air Inlet Hose – 1m 944015 Rubber Cap – With Key ring Chain, Continuous, C/W Split Link 944205 Chain, 12" Circumferential - Extension 944265 Chain, 12" Circumferential - Extension 944260 Chain, 24" Circumferential - Extension 944250 Chain, 24" Circumferential - Extension 944250 Chain Hook 944250 Split Link 944250 Chain Hook	27	943110	Spring	-
943090 Bush – Axle Long – Brass 943010 Circumferential Housing 944005 Air Inlet Hose – 1m 944015 Rubber Cap – With Key ring Chain, Continuous, C/W Split Link 944205 Chain, 12" Circumferential - Extension 944265 Chain, 12" Circumferential - Extension 944280 Chain, 24" Circumferential - Extension 944250 Chain, 24" Circumferential - Extension 944250 Chain Hook 944250 Split Link 944250 Chain Hook	28	943085	Bush – Axle Short – Brass	-
943010 Circumferential Housing 944005 Air Inlet Hose – 1m 944015 Rubber Cap – With Key ring Chain, Continuous, C/W Split Link 944205 Chain, 8" Circumferential - Extension 944265 Chain, 12" Circumferential - Extension 944280 Chain, 24" Circumferential - Extension 944250 Chain, 18" Circumferential - Extension 944250 Chain Hook 944255 Chain Hook 944250 Split Link	29	943090	Bush – Axle Long – Brass	-
944005 Air Inlet Hose – 1m 944015 Rubber Cap – With Key ring Chain, Continuous, C/W Split Link 944205 Chain, 8" Circumferential - Extension 944270 Chain, 18" Circumferential - Extension 944280 Chain, 18" Circumferential - Extension 944280 Chain, 24" Circumferential - Extension 944255 Chain Hook 944250 Split Link 944250 Split Link	30	943010	Circumferential Housing	-
944015 Rubber Cap – With Key ring Chain, Continuous, C/W Split Link 944205 Chain, 12" Circumferential - Extension 944270 Chain, 18" Circumferential - Extension 944280 Chain, 24" Circumferential - Extension 944259 Nylon Washer 944255 Chain Hook 944250 Split Link 944250 O-Ring	31	944005	Air Inlet Hose – 1m	_
Chain, Continuous, C/W Split Link 944205 Chain, 8" Circumferential - CAW Hooks – STD 944265 Chain, 12" Circumferential - Extension 944270 Chain, 18" Circumferential - Extension 944280 Chain, 24" Circumferential - Extension 944259 Nylon Washer 944255 Chain Hook 944250 Split Link 944250 O-Ring	32	944015	Rubber Cap – With Key ring	-
944205 Chain, 8" Circumferential - C/W Hooks – STD 944265 Chain, 12" Circumferential - Extension 944270 Chain, 18" Circumferential - Extension 944280 Chain, 24" Circumferential - Extension 944259 Nylon Washer 944255 Chain Hook 944250 Split Link 39900502 O-Ring	33		Chain, Continuous, C/W Split Link	Opt
944259 Nylon Washer 944255 Chain Hook 944250 Split Link 39900502 O-Ring	34	944205 944265 944270 944280	Chain, 8" Circumferential - C/W Hooks – STD Chain, 12" Circumferential - Extension Chain, 18" Circumferential - Extension Chain, 24" Circumferential - Extension	Opt Opt
944255 Chain Hook 944250 Split Link 39900502 O-Ring	35	944259	Nylon Washer	4
944250 Split Link 39900502 O-Ring	36	944255	Chain Hook	2
39900502 O-Ring	37	944250	Split Link	1
	38	39900502	O-Ring	2

		raille	Oty Oty
_	943080	Bush – Top Hat	2
2	0335220	Bearing (Roller)	4
3	943055	Sprocket	2
4	15906012SS	Cap Head Bolt M6 x 12mm SS	-
2	20900618SS	Washer M6 x 18mm SS	—
9	0332415	Bearing – Chain Tensioner	2
7	943030	Spacer - Chain Tensioner	
8	943025	Chain Adjustment Block	_
6	943095	Axle – Circumferential Drive	2
10	943035	Dowel – 12mm x 80mm – Extractable	2
=	17116016SS	Grub Screw M16 x 16mm	2
12	15508160EX	Dowel – 8mm x 16mm - Extractable	3
13L 13R	943135 943140	Guard Rubber – LHS Guard Rubber – RHS	~ ~
14	943150	Guard Plate Outer	2
15	16605012	Pan Head Screw M5 x 12mm	4
16	943145	Guard Plate Inner	2
17	943125	Thumb Bolt – Long	2
18	943045	Bush – Tensioner Spindle - Lower	_
19	943040	Spindle – Chain Tensioner	_
20	943050	Bush – Tensioner Spindle – Upper	_
21	941040	Insert – Spindle Retainer	-
22	943121	Ratchet Cover Plate	
23	16104006SS	Button Head Socket Screw M4 x 6mm SS	3
24	943105	Ratchet Wheel	
25	943120	Ratchet Knob1	-
26	943115	Ratchet Pawl	-



Longitudinal Module

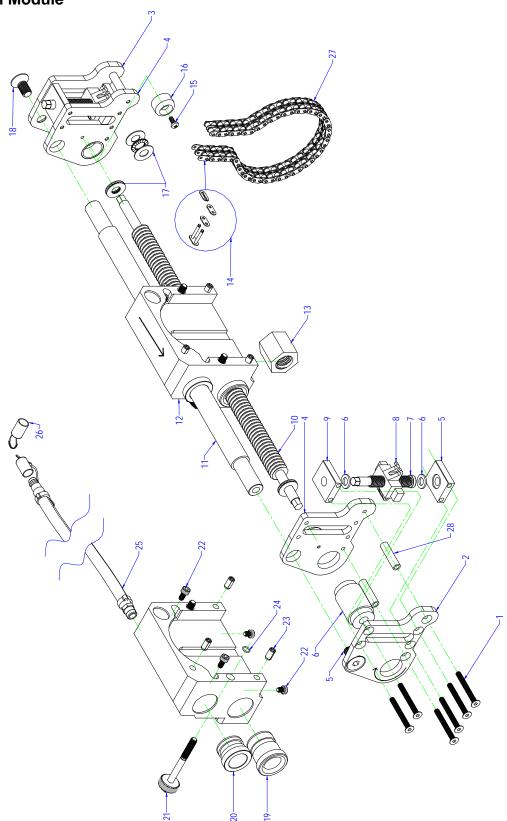




ltem	Part No.	Part Name	Oty
22	15906008LHSS	Cap Head Bolt M6 x 8mm Low Head SS	4
23	15508160EX	Dowel – 8mm x 16mm - Extractable	3
24	3990502	O-Ring	2
25	944005	Air Inlet Hose – 1m	_
26	944015	Rubber Cap – With Key ring	Γ
27	944250 944265 944270 944280	Chain 8" Longitudinal – Standard Chain 12" Longitudinal – Extension Chain 18" Longitudinal – Extension Chain 24" Longitudinal – Extension	2 Opt Opt
28	942090	Spacer 10mm OD	4

ltem	Part No.	Part Name	Oty
-	76/06055S S	Bolt C'Sunk Skt M6 x 55mm SS	12
2	942080	End Plate L/H (Outer)	_
3	942075	End Plate R/H (Outer)	_
4	942095	End Plate Threaded (Inner)	2
5	942060	Chain Tensioner Mounting – Lower	2
9	942045	Bush – Chain Tensioner – Brass	4
7	942035	Shaft – Chain Tensioner	2
8	942040	Chain Hanger	2
6	942055	Chain Tensioner Mounting – Upper	2
10	94230025 94230040 94230060	Drive Rail – 10"Cut Drive Rail – 16" Cut Drive Rail – 24" Cut	Opt
	7.50000		7
=	94220025 94220040 94220060	Guide Rail – 10" Cut Guide Rail – 16" Cut Guide Rail – 24" Cut	1 Opt Opt
12	942010	Longitudinal Housing	-
13	942100	Linear Motion Nut	-
14	944250	Split Link	2
15	16605012	Pan Head Screw M5 x 12mm	2
16	942099	Rubber Buffer	2
17	417765	Thrust Bearing 12mm Bore (3Pc's, 2 x Washer/ Raceway, 1 x Bearing)	2
18	16/12025S S	Bolt C"Sunk Skt M12 x 25mm SS	2
19	942020	Bush – Static Rail - Brass	2
20	942025	Bush – Screw Rail - Brass	2
21	942105	Thumb Bolt - Short	2



Air Treatment System

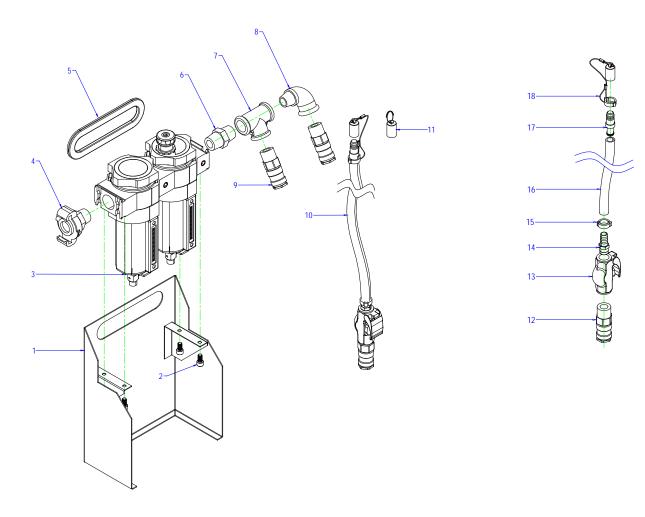

Item	Part No.	Name	Qty
1	944050	Filter Lubricator Stand	1
2	15905010SS	Cap Head Bolt M5 x 10mm SS	4
3	120014m	Claw Coupling ½" BSP Male	1
4	132319N	Air Treatment Assembly	1
5	944074	Beading	1
6	1451313G	½" Hex Nipple	1
7	1481313G	½″ Tee	1
8	112213G	½″ Elbow	1
9	125013	½" Quick Release Coupling	2
10	944020	Dead Man and Hose Assembly	1
11	944015	Rubber Cap C/W Key Ring	Opt

Item	Part No.	Name	Qty
12	125010	¾ Quick Release Coupling	1
13	042010	Dead Mans Handle	1
14	1141010	¾″ Hose tail	1
15	047010	Hose Clip	1
16	10814510	PU Hose 14.5mm OD / 10mm ID	3m
17	124010H	Quick Release Tail	1
18	944010	Rubber Cap C/W Lanyard	1